


NEC Multimedia Cart Instructions



Projector On & Off buttons

Power buttons

 Image Source buttons

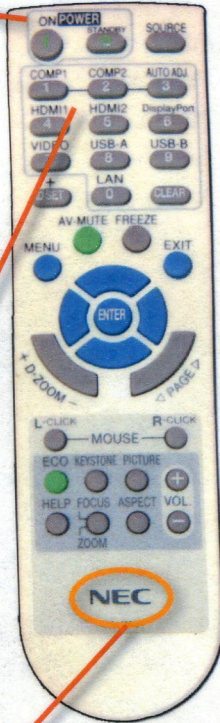

To use the multimedia set-up, turn on the equipment by pressing the power buttons.


Turn the projector On (“ON”) or Off (“Standby”) using the NEC projector remote.

To select from among the different image sources that are available, press the appropriate button on the **projector remote**:

- “HDMI 1” (button “4”) = laptop computer
- “HDMI 2” (button “5”) = auxiliary computer (HDMI device)
- “COMP 1” (button “1”) = document camera/auxiliary computer (VGA device)

The document camera is used to project objects (2D or 3D) or to display an external VGA computing device. The lamp light button for the document camera is located at the end of the camera arm.



If you need to use a VGA device, there is an auxiliary VGA cable connected to the document camera. Plug this cable into your device (Apple and tablet devices require an adapter). Please remember to switch the signal source on the **projector** remote to “COMP1” and press the laptop button on the **document camera**.

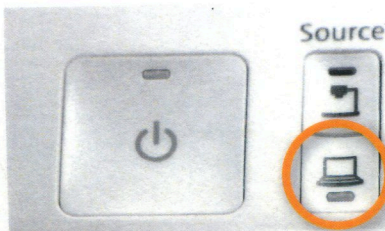

Document Camera

The document camera can be used to project 2D and 3D objects. You may use the light switch to illuminate your object. To rotate the images, turn the camera knob either clockwise or counter-clockwise to adjust your image.

You can change the zoom level, brightness and/or focus using the controls located on the base of the document camera.

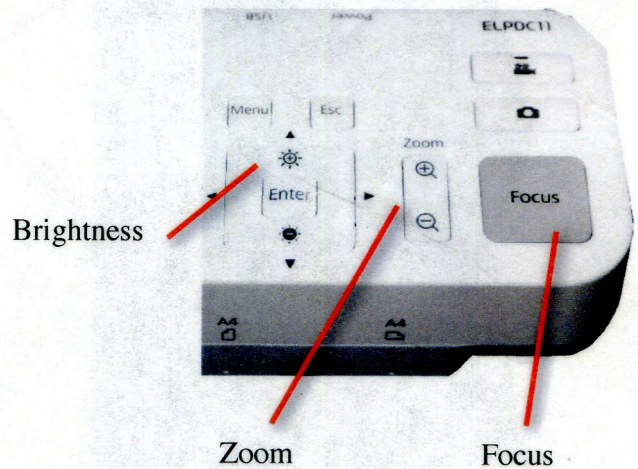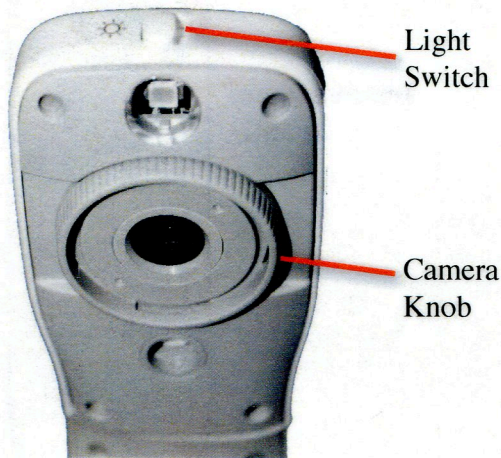

Basic Troubleshooting

I'm not seeing the computer, even after I selected "HDMI 1" on the projector.

-All of our laptops offer the option of displaying the computer signal in three different modes 1) the laptop screen only, 2) the projector only OR 3) both the laptop screen and the projector. Press the "Fn" + the "F8" keys together and release. Wait 3 seconds. Pressing this key combination will toggle between the three different display modes. This can be useful if you need to look at something on the computer but do not want the entire class to see it on the projector.

I'm unable to see my image source, even after I press the correct button on the remote.

-Sometimes, there can be a delay of up to 7 seconds when switching between different image sources as the projector adjusts itself for the different image type and resolution.

I want to play a DVD (or CD) and there is no DVD deck on the cart.

-DVD's (and CD's) can be played through the laptop computer using either Windows Media Player OR VLC Media Player.

When all else fails...

-Call The Media Center at ext. 4352.